



Data sheet

Thermostat Type KPU 19



KPU 19 thermostats are used for temperature regulation in refrigeration, freezing, air conditioning, ventilating and heating systems.

KPU 19 thermostats are fitted with Single-Pole Double-Throw (SPDT) or Single-Pole Single-Throw (SPST) contact system.

The standard KPU 19 enclosure is rated NEMA ~ 1.

NEMA ~ 1 is obtained when the thermostat is mounted on a flat surface with all unused holes covered.

Features

- Long operational life time
- Stable settings
- Reliable and robust SPST and SPDT contact system
- Switching points can be set easily and accurately using the range scale plate and differential adjusting knob.
- Terminals enable easy wiring
- KPU 19 easily replaces other manufacturers' thermostats

Approvals

UL 873, file E96053

Technical data

Ambient temperature		-31 – 158 °F for KPU with remote bulb	
		-31 – 140 °F for KPU with room sensor	
Max. bulb temperature		140 °F	
Functional range		-30 – 80 °F	
Differential		3.6 – 12.6 °F	
Reset		Automatic	
Switch system		SPST (close on temp. rise), SPDT	
Contact load	Resistive load	0.5 ~ 16A/120V AC 0.5 ~ 8A/240V AC	
	Inductive load	Full load	0.5 ~ 16A/120V AC 0.5 ~ 8A/240V AC
		Locked rotor	96A/120V AC 48A/240V AC
	Pilot duty	125V A; 120/240V AC	
Enclosure		NEMA ~1 (when mounted on a flat surface with all unused holes covered)	

Ordering

Type	Regulating range [°F]	Differential ΔT [°F]	Bulb size [°F]	Capillary tube length [in.]	Reset	Switch system	Code no.
KPU 19	-30 – 80	3.6 – 12.6	3/8 x 4 1/2	120	auto.	SPDT	060L2150
KPU 19	-30 – 80	3.6 – 12.6	3/8 x 4 1/2	80	auto.	SPST (close on temp. rise)	060L2151
KPU 19	-30 – 80	3.6 – 12.6	–	Air coil / Room sensor	auto.	SPDT	060L2152


Enclosed accessories:

- Sensor clamp for bulb fastening.
- Blinding sticker to cover the hole after dial knob removal. Blinding sticker can be used only once.
- Hand knob for adjustment.

Contact system

Switch type	Switch action	Applicaton
<p>SPDT</p> <p>Danfoss 60-1421.10</p>	1. Terminals C – H close high and open low terminals C – L can be used as low temperature alarm. 2. Terminals C – L open high and close low terminals C – H can be used as high temperature alarm.	1. Low temperature cut-out 2. High temperature cut-out
<p>SPST (open low)</p> <p>Danfoss 60-1422.10</p>	Terminals C – H close high and open low	1. Low temperature cut-out 2. Condenser fan cycling control

Dimensions [in]

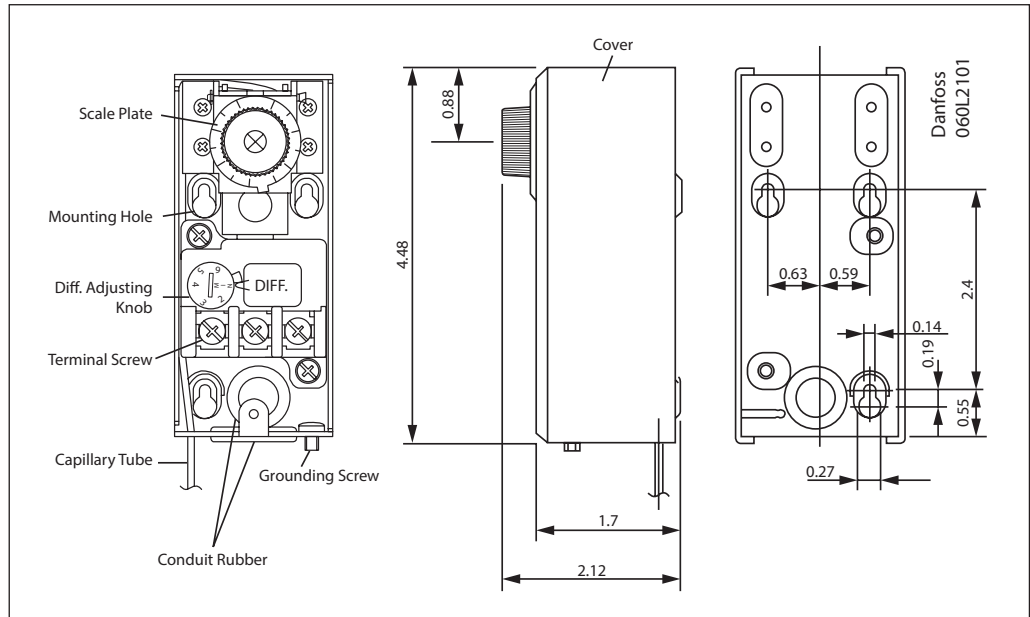

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.