




Iable I			
Number	Description	Number	Description
1	Air Intake Vent Pipe (C-Vent) ³	9	Tee with Drip Leg & Cleanout Cap ³
2	Vertical Concentric Vent Box	10	Draft Hood Connector (C - B) ³
3	Aluminum Flex Pipe (or C-Vent) ^{3,5}	11	Type RV B-Vent (Double-Wall, 1/4" Air Gap)3,4
4	Combustion Air Inlet Pipe Connection	12	Flashing (field supplied) ³
5	Gas Pipe	13	Combustion Air Inlet Terminal
6	Power Exhauster	14	Reverse Draft Hood Connector (B - C) ³
7	Vent Pipe Connection ¹	15	Exhaust Vent Cap
8	C-Vent ^{2,3}		


- 1 HDS models 30-45 are factory supplied with 3"-4" vent adapters for attaching the exhaust & air intake pipe to the heater.
- 2 Horizontal sections of vent pipe are to be installed with a minimum downward slope from the appliance of ¼ inch per foot.
- 3 All C-Vent, B-Vent, Aluminum Flex Pipe and accessories are field supplied and installed.
- 4 Follow the link on last page for availability and P/N's of Selkirk Type "RV" B-Vent components.
- 5 Aluminum Flex Pipe (per local authority) &/or C-Vent, suggested 26 ga.

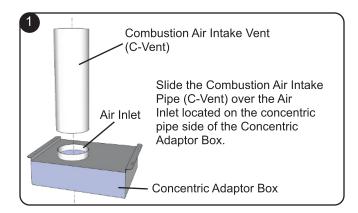


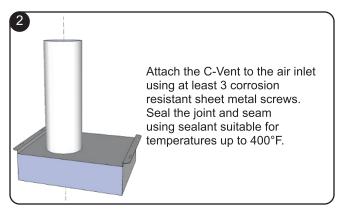


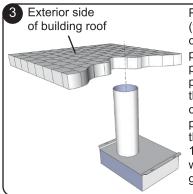



Place this assembly (the adapter box and combustion air intake pipe) through the properly prepared hole penetration/flashing in the roof ensuring combustion air intake pipe terminates above the snow line or at least 12" above the roof, whichever distance is greater.

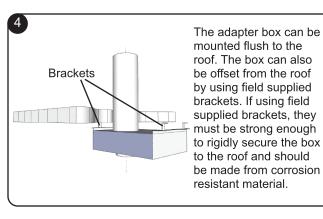


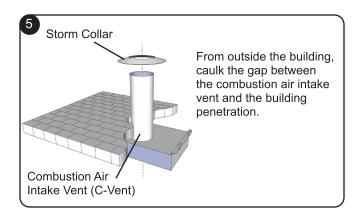


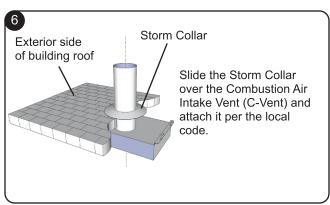

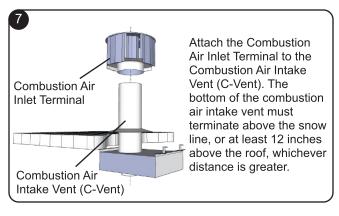


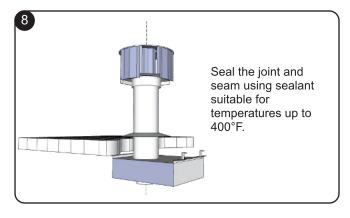

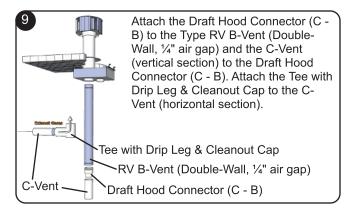


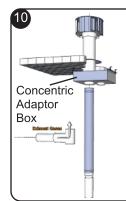



Insert the assembly (Type RV B-Vent {Double-Wall, ¼" air gap}, Draft Hood Connector (C - B) and C-Vent) through the hole on the non-concentric pipe side of the Concentric Adaptor Box to pass concentrically between the Air Intake Vent Pipe (C-Vent) and appear above the Combustion Air Inlet Terminal.

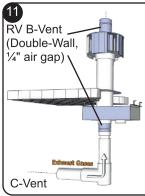


Attach the assembly (C-Vent and Tee with Drip Leg & Cleanout Cap) to the bottom end of the assembly (Type RV B-Vent (Double-Wall, ¼" air gap), Draft Hood Connector (C - B) and C-Vent). Horizontal sections of vent pipe are to be installed with a minimum downward slope from the appliance of ¼" per foot and suspended securely from overhead structures at points not greater than 3' apart.

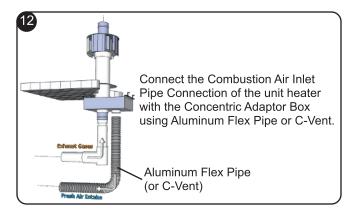

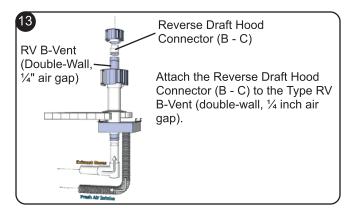

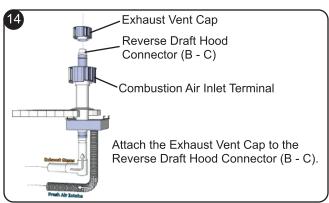

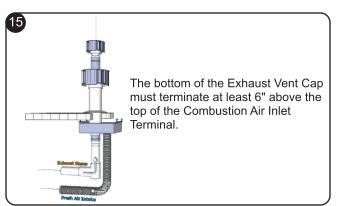

Refer to Table 2 on the next page for B-Vent, C-Vent and Concentric Adaptor Box dimensions recommended for corresponding unit heater model #s.

All seams and joints must be sealed with either tape, silicone sealant, or other appropriate sealants suitable for metal to metal contact and for temperatures up to 400° F. If using tape, wrap it two full turns around the vent pipe.

A minimum of 12" straight pipe is recommended from the flue outlet before turns in the vent pipe.

Fig 1 - Vertical Concentric Venting **Outdoor Clearancess**

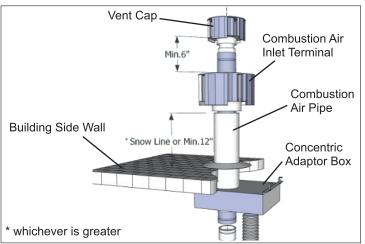


Fig 2 - Adaptor Box with Combustion Air Intake Pipe Attached

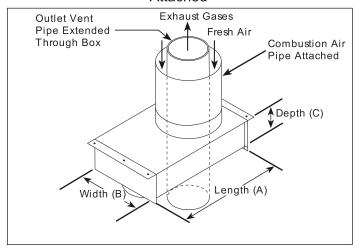


Table 2

Model #	BTU/hr	Exhaust Pipe	B-Ven	t Pipe*	Combustion Air	Concen	tric Adaptor	Вох
		(C-Vent)	ID	OD	Pipe (C-Vent)	Length (A)	Width (B)	Depth (C)
HDS / HDC	30-125	4"	4"	4.5"	6"	18.84"	13.33"	4.57"
PTS / BTS	150-200	4"	4"	4.5"	6"	18.84"	13.33"	4.57"
PTS / BTS	250-400	6"	6"	6.5"	8"	15.27"	17.00"	4.57"

For reference, Selkirk Type "RV" B-Vent (inner liner - aluminum, outer casing - galvanized, 1/4" air gap). Scan the QR code on the right with your smart phone to view the Selkirk Type "RV" B-Vent web page (http://www.selkirkcorp.com/supervent/Product.aspx?id=70).



Vertical Concentric Vent Kit Components & Part #s:

- A) Exhaust Vent Cap
- B) Combustion Air Inlet Terminal
- C) Concentric Adaptor Box

Model Size:	30-45	60-200	250-400
Acc Code:	33356	33356	33357



Hydronic HVAC

Tech Support

Sanjeev Khindaria, B.Sc. Tel: 416-716-7332 Email: sanjeev@hydronichvac.com Philip Antecol, P.Eng. Tel: 416-618-4950 Email: sales@hydronichvac.com

www.modinehvac.com



Disclaimer: This supplement is not an authorized document from Modine Manufacturing. It is strictly a supplement to assist in understanding how the concentric kit is assembled. Please refer to manufacturer's Installation & Operations Manual for detailed instructions.