


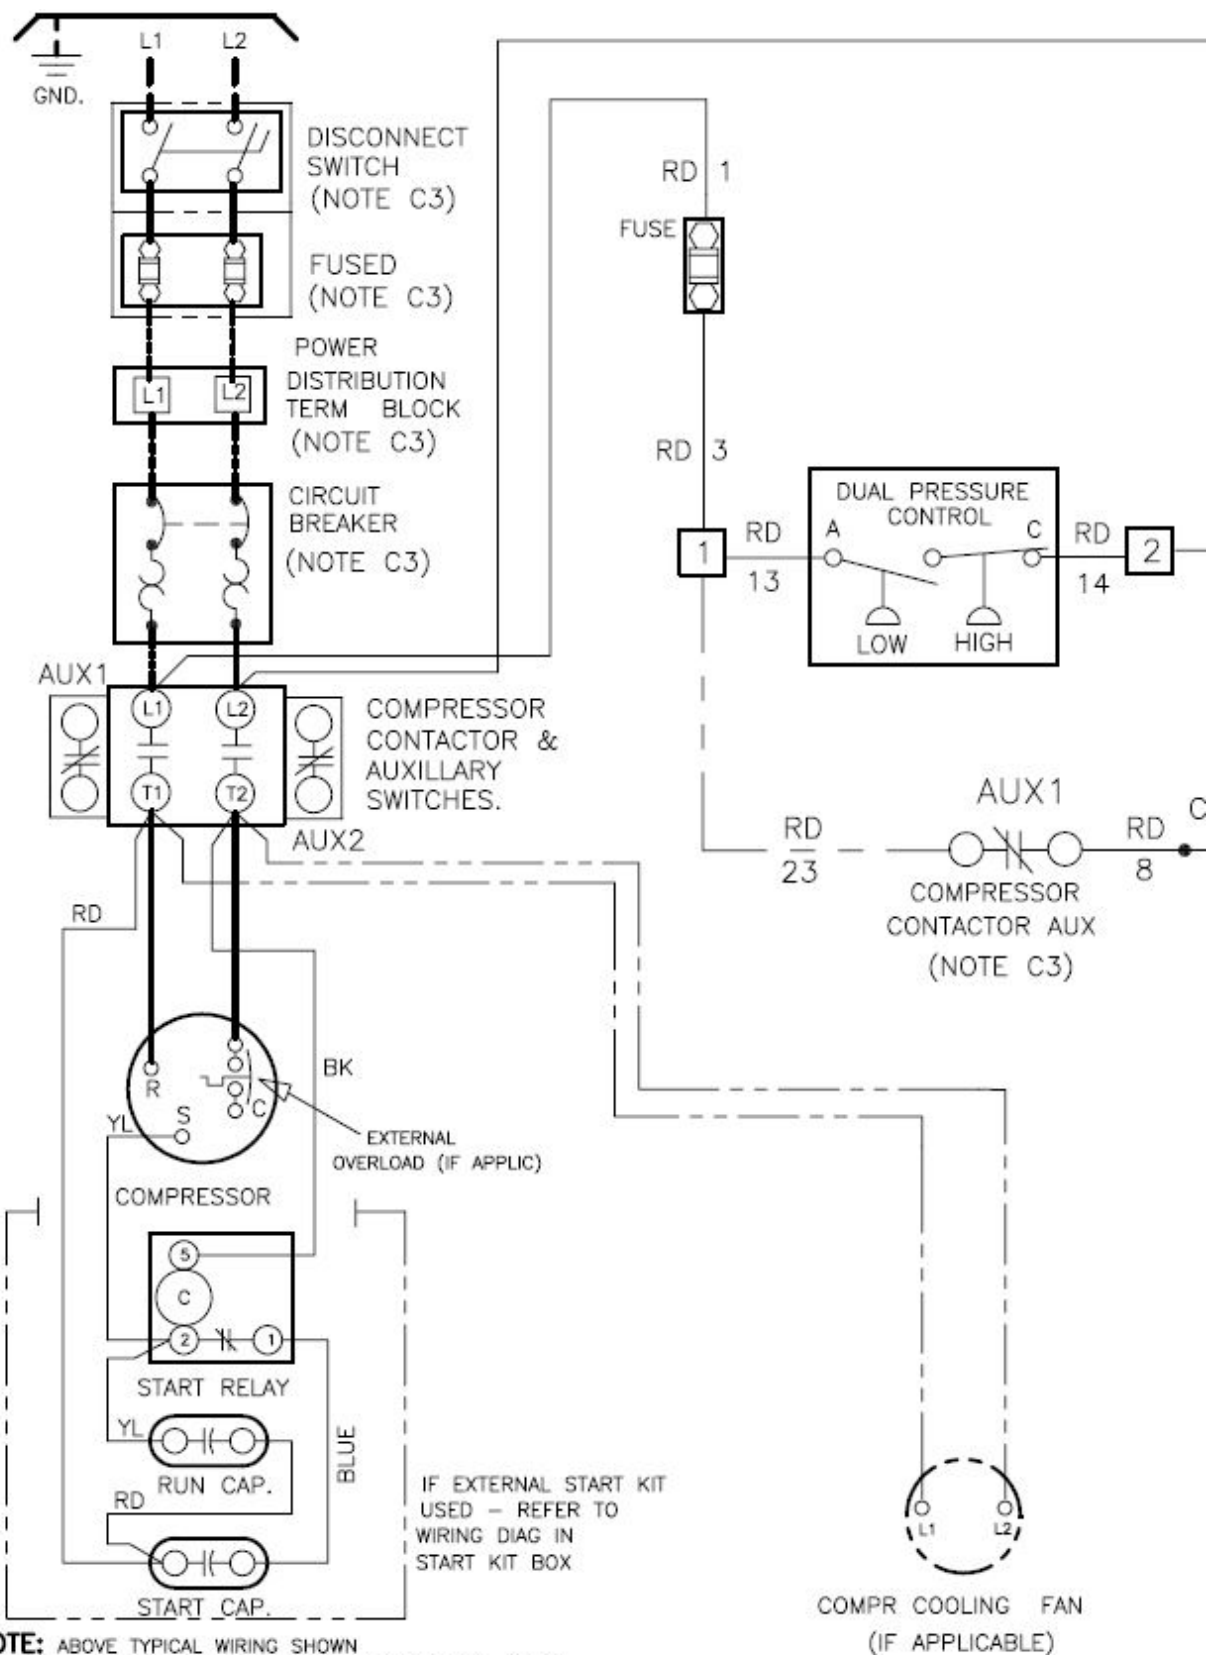

NOTE: ABOVE TYPICAL WIRING SHOWN
WITH START COMPONENTS IN MAIN CONTROL PANEL
REFER TO COMPRESSOR TERM BOX FOR SPECIFIC DIAGRAM